

160 / 80 Meter Antenna Switch at PJ4G

See Figure 2 for cable connections.

Refer to Figure 1 on how to use the switch.

The 80 meter antenna is a four element sloper system.

There are two 160 antennas. An Inverted V and an Inverted L

For 80 meters switch the toggle switch to **CW (Off)** when operating in the CW band and **SSB** when operating on 75 meters. Switch the bottom right hand toggle switch up to **Slopers**

The rotatable switch selects the **direction** on 80/75 meters.

The toggle switch on the left selects the 160 meter antenna you want to use.

Figure 1



Figure 2

